


AIRMAX

Installation Instructions

(2004-2006 GM Colorado/Canyon 3.5L L-5 Part # 13500)

Important! Read all instructions before you begin installation.

1. Disconnect Mass Air-Flow (MAF) sensor harness. Remove MAF from air cleaner assembly. Loosen and remove air inlet tube from resonator and air filter assembly. Disconnect fuel pressure vacuum line from resonator. Loosen and remove resonator. Remove the 2 bolts and nut securing the air cleaner assembly to the inner fender. Remove the air cleaner assembly from vehicle.
 2. Loosely bolt the AirMax housing to inner fender. Install AirMax tube to the throttle body using OE coupler and clamp. Place the rubber grommet in hole of tube. Insert the vacuum nipple into rubber grommet. Bolt the tube to the engine block with the hardware provided. Tighten all bolts securing the housing and tube.
 3. Join the tube and housing using the 3.5" coupler and clamps. Secure all clamps.
 4. Use the supplied 7/32" vacuum line to the nipple and the fuel pressure regulator.
 5. Use the supplied 1/2" hose to the PCV vent and tube.
 6. Install MAF using the 8-32 bolts. Reconnect the MAF harness.
 7. Install K&N filter (RF-0920) and tighten clamp to secure the filter to the housing.
- DO NOT OVER TIGHTEN, AS THIS WILL DEFORM OR DESTROY THE FILTER AND IS NOT WARRENTIED BY STREET & PERFORMANCE ELECTRONICS OR K & N FILTERS.**

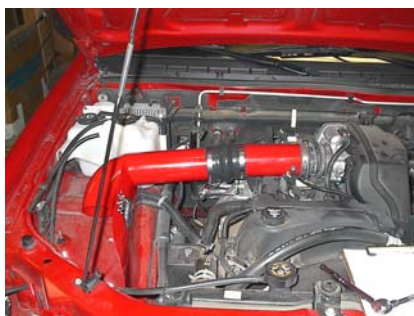

Parts List

- 1 AirMax housing
- 1 AirMax tube
- 1 K&N air filter (RE-0920)
- 1 Rubber grommet
- 1 Vacuum nipple
- 2 8mm x 35mm bolts
- 2 8mm flat washers
- 2 8-32 x 1/2" bolts
- 1 3.5" coupler w/clamps
- 12" 7/32 vacuum line
- 9" 1/2" hose

Any questions call: **Street & Performance Electronics**
304 Smokey Lane North Little Rock, Arkansas 72117
Phone: (501) 945-0354 FAX: (501) 945-0370
www.StreetandPerformanceElectronics.com