

AIRMAX

Installation Instructions


(1994-97 Ford F250/350 7.3L PowerStroke Diesel Part # 27200)

Important! Read all instructions before you begin installation.

1. Loosen and remove turbo air inlet duct from factory air housing. Remove Air Temperature Sensor (ATS) from air housing.
2. Remove three bolts holding air filter housing to the vehicle and lift the housing from the vehicle. Remove the rubber grommets from the factory air housing and transfer them to the AirMax retaining brackets.
3. Assemble the AirMax housing retainer brackets to the AirMax housing. There are three different brackets. See illustration for details. Fasten the brackets to the AirMax housing using the 8-32 bolts and nuts. Leave them slightly loose to adjust the housing position in the vehicle.
4. Install AirMax housing into vehicle; align the rubber grommets in the brackets to their corresponding holes in the vehicle. Bolt the AirMax housing to the vehicle using the original bolts. Adjust the housing to level and complete tightening of the 8-32 bolts.
5. Reinstall ATS onto AirMax housing.
6. Install the 4" coupler and clamps to the AirMax housing. Complete the connection to the turbo air inlet duct. Tighten clamps securely.
7. Install the K&N (RE-0870).

DO NOT OVER TIGHTEN, AS THIS WILL DEFORM THE FILTER AND IS NOT WARRENTIED BY STREET & PERFORMANCE ELECTRONICS OR K & N FILTERS.

8. Double check the tightness of the retaining bolts, bracket bolts coupler connections and air filter.

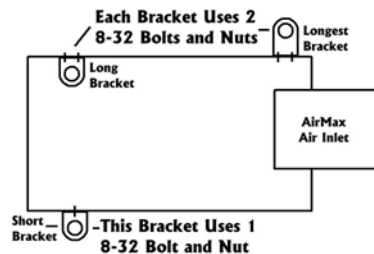

Parts List

- 1 AirMax Housing
- 1 K&N air filter (RE-0870)
- 1 4" coupler and clamps
- 3 Housing brackets
- 5 8-32x1/2" bolts
- 5 8-32x1/2" nuts

Any questions call: **Street & Performance Electronics**
304 Smokey Lane North Little Rock, Arkansas 72117
Phone: (501) 945-0354 FAX: (501) 945-0370
www.StreetandPerformanceElectronics.com