


AIRMAX

Installation Instructions

(1998-02 Dodge Ram 2500/3500 5.9 Cummins Turbo Diesel Part # 35950)

Important! Read all instructions before you begin installation.

1. Loosen and remove air inlet tube on the filter housing.
2. Lift and remove air filter assembly from vehicle.
3. Remove two rubber grommets from mounting tabs of stock air filter assembly.
4. Transfer the rubber grommets to the mounting holes on the AirMax housing.
5. Install AirMax housing onto OE mounting pegs.
6. Install air inlet tube. Tighten clamps to secure hose to AirMax housing.
7. Install air filter (K&N RE-0870).

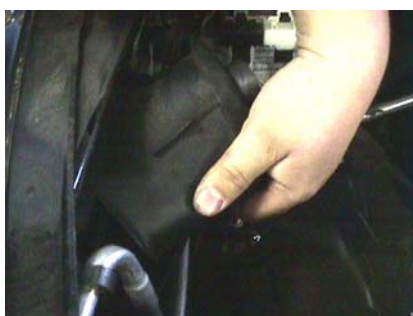

Parts List

- 1 AirMax housing
- 1 K&N air filter (RE-0870)
- 1 K&N pre-cleaner (25-0810)

Any questions call: **Street & Performance Electronics**
304 Smokey Lane North Little Rock, Arkansas 72117
Phone: (501) 945-0354 FAX: (501) 945-0370
www.StreetandPerformanceElectronics.com